



USER GUIDE

Chronograph
Automatic Movement
with crown screwed



Your B.R.M Chronographes watch was manufactured, assembled and checked with the utmost care by our watch-makers.

To ensure longevity please read the following instructions carefully.

Time setting

Your chronograph watch has an approximate power reserve of 46-hours.

If the watch is not worn daily the power reserve will run out and the watch will stop.

To set the time, please unscrew (A) your crown anticlockwise and pull it to position I. After setting the time, return the crown to 0 by pressing and turning it clockwise to the screw without forcing (B).

Date setting

Press corrector n°4. Each press advances the date of one day.

Important: don't change the date if the hands are between 9 p.m and 1 a.m.



Chronograph function

- Starting of the chronograph:
press button n°2
- Stopping of the chronograph:
press button n°2
- Resetting of the chronograph to 0:
press button n°3



Water-resistance

All B.R.M Chronographes watches are waterproof. The indication of the water-resistance level in meters is engraved on the back of the case. This indication corresponds to the current norms of the watch-making industry. The measurements have been carried out by application of pressure and depression. The maintenance of the waterproof characteristics of your watch depends on the care you will bring.

Never activate any button or corrector while in water. Before any contact with liquids, make sure the winder is in position 0.

Safety Instructions

Your B.R.M Chronographes watch is a precision tool. It is important not to expose it to:

- strong vibrations,
- magnetic fields,
- very sudden temperature changes,
- after sea use, rinse it out with tepid water.

Maintenance

The maintenance or repair of your B.R.M Chronographes watch must be carried out exclusively by a B.R.M Chronographes authorized dealer.

brm-chronographes.com

