



USER GUIDE

Automatic movement
GF6 - GF7
Screw crown



Your B.R.M Chronographes watch was manufactured, assembled and checked with the utmost care by our watch-makers.

To ensure longevity please read the following instructions carefully.

Time setting

Your automatic watch has a power reserve of approximately 38 hours. If the watch is not worn daily the power reserve will run down and the watch will stop. To set the time, unscrew the crown (A) and pull it to position 3. After setting the time, return the crown to 0 by pressing and turning it to screw it back in without forcing (B).

Position 2 is neutral.

Winding on

After a long time not worn, please unscrew (A) your crown, pull it to position 1. The movement starts running again.





B.R.M.
"Chronographes"

Water-resistance

All B.R.M Chronographes watches are waterproof. The indication of the waterresistance level in meters is engraved on the back of the case. This indication corresponds to the current norms of the watch-making industry. The measurements have been carried out by application of pressure and depression. The maintenance of the waterproof characteristics of your watch depends on the care you will bring.

Never activate any button or corrector while in water. Before any contact with liquids, make sure the winder is in position 0.

Safety Instructions

Your B.R.M Chronographes watch is a precision tool. It is important not to expose it to:

- strong vibrations,
- magnetic fields,
- very sudden temperature changes,
- after sea use, rinse it out with tepid water.

Maintenance

The maintenance or repair of your B.R.M Chronographes watch must be carried out exclusively by a B.R.M Chronographes authorized dealer.

brm-chronographes.com

