



USER GUIDE
FF39-40

Automatic Movement



Your B.R.M Chronographes watch was manufactured, assembled and checked with the utmost care by our watch-makers.

To ensure longevity please read the following instructions carefully.

Time setting

Your automatic watch has an approximately 38 extra working hours. If the watch is not worn daily, the extra hours will run out and the watch will stop.

To set your watch, put the winder in position 1. After setting, bring it back to the 0 position.



Safety Instructions

Your B.R.M Chronographes watch is a precision tool. It is important not to expose it to:

- magnetic fields,
- very sudden temperature changes,
- if your watch has a strap made of Alcantara, technical fabric, or other natural skins (crocodile, lizard, leather) these materials are sensitive to humidity, so it is advisable not to wet them.



Water-resistance

Your B.R.M Chronographes watch is waterproof up to 30 meters. This indication is engraved on the back of the case it corresponds to the current norms of the watch-making industry. The measurements have been carried out by application of pressure and depression.

The maintenance of the waterproof characteristics of your watch depends on the care you will bring to it.

Before any contact with water, make sure the winder is in position 0.

Maintenance

The maintenance or repair of your B.R.M Chronographes watch must be carried out exclusively by a B.R.M Chronographes authorized dealer.